

RS LOGIX 500 Starter - ELEC 141
Printing Ladder Diagrams - Print Reports

1. Click on "FILE"
2. Click on "REPORT OPTIONS"
3. "CONFIGURATION" should be highlighted, if not click on "CONFIGURATION"
4. Click on "DESELECT ALL." Click ☒ "Program Files". Click Apply
5. Click "LADDER SETUP" Click:
 - (a) Binary Bit Display Mode, ☐ Bit
 - (b) Bit Address Format, ☐ Single Line
 - (c) Address Description, Alignment:
 <Center> (Optional)
 - (d) Misc: ☒ Show 3D instructions (Optional)
 - (e) Click Apply
6. Click On: "Program Files":
 - (a) Click On: "Select Files"
 - (b) Click On: "Deselect All"
 - (c) On the Program File/Run Chart, Check off the Ladder Diagram Numbers you want printed. For example LAD 2, LAD 6 (if used), etc.
 - (d) Click "APPLY", then click "Print Preview"
7. Scale up or Scale down each page to your size preference; then print.
8. Save

NOTE: You may want to try other report options.